 


Acoustic Cloud – Lighting and Remote Control

This manual shows which parts are included, how to install the LED modules and how to control the lighting using the remote control.

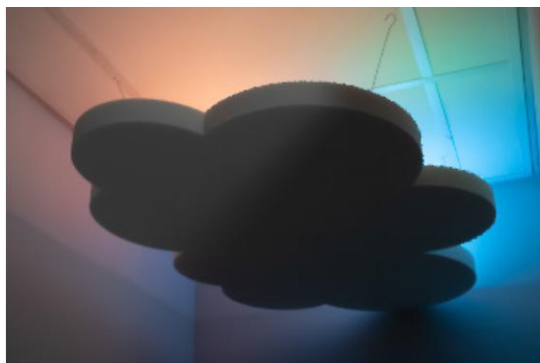


Components


Quantity	Component
2	Remote controls
6	LED modules
18	AAA batteries
1	Acoustic cloud

Installing the LED modules

1. Open the LED module

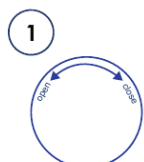

2. Insert 3 × 1.5 V AAA batteries into each LED module.

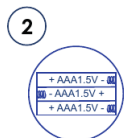

3. Attach the LED module to the cloud. Hang the cloud so that the LED lights are positioned on the top, as shown. If the cloud is hung upside down, the lights may fall out.




4. Control the lighting using the remote control.



The remote control uses a 3 V battery. Follow the instructions on the back of the remote control to replace the battery.

Using the remote control

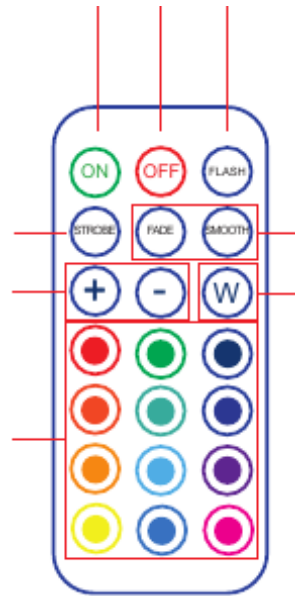

Button	Function
ON / OFF	ON / OFF
FLASH	7 colours flashing
STROBE	3 colours flashing
FADE / SMOOTH	Fading colour transitions
+ / -	Adjust brightness or speed
W / colour buttons	White light / select colour
Battery	3 V; see back of remote control