



## 1. Name of the product

Colour Changing Egg - Large

## 2. Product code

20151111

## 3. Short description

This egg changes slowly in colour. By means of a button, the favorite colour can also stand still. Includes remote control & batteries.

This egg discolours slowly and without colour actions. The egg can of course also be operated with a remote control. Safe, soothing and pleasantly soft in colour. The mood lighting is fully portable and lasts up to 12 hours after a full load, both inside and outside. Use the remote control to switch between light modes, phases and colours or simply set to fade between the 6 main colours. The remote control can control multiple units. Charging time around 4 5 hours for a full charge.

## 4. Sensory stimulations

See

## 5. Technical information

Size: 20 x 20 x 28cm

Weight 1kg

Material: PE

LED: non – replaceable multi coloured LEDs

Input: 110-240V~ 0.5A Max 50/60Hz

Output: 5.0V === 2.0A

## 6. Content

1 x Adaptor

1 x Remote Control (requires 2 x AAA batteries not included)

1 x Large Egg

## 7. Safety

Contains sequences of flashing lights which may affect individuals who are susceptible to photosensitive epilepsy or other photosensitivities.

### Safety Warnings:

- Before setting up the product, ensure the product is not damaged. If any part of the product is damaged, do not attempt to assemble and use.
- Only use the adaptor supplied with this product and no other adaptor must be used.
- This is not a toy. Children must always be supervised when using this product.
- Always unplug the product before cleaning or handling.
- Do not operate in packaging
- Keep away from heat sources or naked flame
- Carry out regular checks to ensure fixings, fittings and installation has not become loose.
- Ensure cable and the product are placed such that no trip, entanglement or strangulations hazards are likely to occur





## 8. Installation

### Before Installation

- Before you start, please read these instructions carefully and retain for future reference. Check the contents inside the packaging and ensure you have all the required parts listed and there are no missing parts. If any parts are missing **DO NOT** attempt to assemble the product.
- Carefully remove the product from its packaging.
- Ensure a plug socket is within reachable distance, without stretching the wire too much.
- This unit is rechargeable; therefore, it is advised to charge the unit for between 4-6 hours before initial use.
- Once fully charged, the unit should work for 8-10 hours, before recharge is required. However please note the longer the unit is left on, the brightness of the light may become dimmer, if this is the case please connect the adaptor to recharge.

### Installation

1. On the base of the product, the port for the adaptor pin to be inserted has been covered by a rubber cover. Pull open the cover. Insert the pin from the adaptor to this port.
2. Plug the adaptor to the mains wall socket and switch on. The unit does not need to be continuously powdered from the mains. Once it has been charged, the adaptor can be removed.
3. To turn the unit on press little white button next to the adaptor DC port. Then the “on” button on the remote.

### Remote Control Functions

	Increase and Decrease Brightness		Changes through different colours in Flash mode
	OFF and ON buttons		Changes colours in 3 seconds jump
	Change through various colours in static mode		Colour fades away
	Select main primary colours in static mode		Colour slowly fades away

- To insert batteries in the remote control, open the cover on the back of the remote and insert 2 x AAA batteries – ensuring you follow the diagram in the battery box. Replace the cover and switch on.

For more information, you can visit our website [www.nenko.com](http://www.nenko.com)