



## 1. Name of the product

Dream swing L set

## 2. Product code

20241065

## 3. Product description

An ideal place to dream, relax, but also to play. The knotted cotton material of this swing gives the feeling of floating and offers security and safety for pure relaxation. Made of natural and ecologically sound material - wood and washable cotton. The elasticity of the cotton offers flexibility and comfort. Height adjustable. Includes height adjustment, cutting lock and bag. For rocking sit or lie down. The calming movement provides tactile and vestibular stimulation. Maximum load capacity: 150 kg. Suspension height: 180-300 cm. Distance to the wall: 70 cm.



## 4. Specifications (comparison)

| Models                             | Dream swing M – children                           | Dream swing L set                          | Dream swing XL set   | Dream swing XXL set   |
|------------------------------------|--|--|--|---|
| Details                            | High freedom of movement for children from 3 years | Compact model for children and adolescents | Compact model for children and adults, foot part offers a higher relaxation area | Spacious comfort lounger and adjustable chair for people up to approx. 1.80 m |
| Woods                              | Untreated  | Untreated                                  | Untreated, oak, light oak dark   | Untreated, oak, light oak dark  |
| Length of wood transverse/sideways | 85 x 65 cm   | 100 x 90 cm                                | 120 x 98 cm  | 130 x 130 cm  |
| Width/length dimensions            | 85 x 65 cm   | 100 x 90 cm                                | 120 x 98 cm  | 130 x 130 cm  |
| Height adjustments                 | Min. 150 cm, Max. 250 cm                           | Min. 180 cm, Max 300 cm                    | Min. 200 cm, Max. 300 cm   | Min. 220 cm, Max 300 cm   |
| Wall distance                      | Min. 65 cm   | Min. 70 cm                                 | Min. 80 cm   | Min. 85 cm  |
| Resilience                         | Up to 75 kg  | Up to 150 kg                               | Up to 150 kg   | Up to 150 kg  |

## 5. Wash instructions

The dream swings are designed as relax furniture and are not suitable for frequent full washing. Washing a dream swing net is not as common as washing a garment or pointed textiles. Follow the instructions below:

**Preparation:** First remove the cross and side supports and hang up the dream swing. Detach the mesh from the height adjustment. Spread out the net and place the lanyards rolled up on the net. Fold it up in such a way that the hanging ropes are completely enclosed by the net. Just put this bundle in the washing machine. Please note that depending on the size of the nets, a washing machine with the correct capacity may be required.





**Washing:** Select the wool program at 30 °C. Our best result is achieved at a centrifuge setting of 800 rpm. At higher spin levels, it can harden and twist. Use a detergent that does not contain bleach or fabric softener.

**Our product recommendation:** detergent with soap herb extract, lanolin wool rinse, descaling agent, stain remover. We recommend that you use the ecological care products

**Our washing advice for optimal results:** just use the detergent according to the dosage instructions on the bottle. As a care additive, we recommend adding lanolin wool rinse to the fabric softener compartment to maintain the softness of the cotton. If your water is very hard, you can also add descaling agent to the fabric softener compartment to reduce the hardness and thus achieve a softer end result. Depending on the weight of the dream swing, you can use 30 50 ml of wool rinse and descaler. In case of light contamination, the cleaning result is improved by adding stain remover, which you put directly into the drum. Highly contaminated nets must be pre-treated with bile soap or stain remover.

**NOTE:** If you want to use stain remover, pay attention to the manufacturer's instructions, especially if you want to wash a colored dream swing net to prevent unwanted paint runoff.

**Drying:** The cotton used is not suitable for the tumble dryer. Be sure to dry the moistened just after washing with good and sufficiently warm ventilation so that no rust occurs. Preferably use a drying rack and spread the net on top. This process can take days, so plan to wash the dream swing in dry, warm weather or in a well-ventilated warm room. The net should not be used again until it is completely dry.

**Brushing:** Due to the moisture, the fine surface fibers adhere to each other. To maintain the original airiness, you can treat the lying surface with a medium-hard clothing brush after drying. A brush of pure horsehair is best for this.

For more information, you can visit our website [www.nenko.com](http://www.nenko.com)

