



## 1. Name of the product

Talking Photo Album

## 2. Product code

20365471

## 3. Colour

See image



## 4. Brief description

Open this talking photo book and hear the story accompanying the photos or drawings on every page, place your own photos in the transparent boxes and then record a message on each page.

Beautiful as a personal life book full of memories. Bring memories to life, record reassuring messages, preserve visual and auditory memories, and encourage discussion.

## 5. In use

### Activate Talking Photo album

1. Make sure the power button is off when you install the batteries. Use a screwdriver to remove the screw from its compartment.
2. Place the batteries in the battery compartment.
3. Screw the cover back on.
4. Shift the on/off button. This button is located at the bottom left.
5. The Talking Photo Album is ready for use!

#### ***Please note:***

- Use the specified batteries (3 x AAA)

### Recording message

*The total recording time of the Photo Album is 6 minutes (360 seconds). It is possible to record a maximum of 18 seconds per page. There are 20 pages in total.*

1. Slide the on/off button to "on".
2. Press and hold the record (REC) button and the playback button (one on each page) simultaneously. The red light will turn on to confirm that a message is being recorded.
3. Hold both buttons down while recording.
4. Speak the desired recording clearly near the microphone, at a distance of about 15 centimetres.
5. Finished recording? Do not release both buttons until the desired message has been recorded.

#### ***Please note:***

- Recording stops automatically after 18 seconds.
- Follow the instructions again if you want to record a new message.

### Play recorded message

1. Do you want to play a message? Find the desired page and press the play button. It is also possible to pause the recording in between, then press the play button again.





***Please note:***

- Do you want to save the recorded messages? Slide the lock slider, located in the battery compartment.

## **6. Sense Stimulations**

Feel, See, Hear

## **7. Specifications**

Size: 22,5 x 17,5 x 3,5 cm

Battery: 3 x AAA (not included)

## **8. Included**

1 Talking Photo Album

## **9. Important information**

This item is not suitable for children under 3 years of age.

\*Danger of suffocation

Use the correct batteries (LR44) to prevent damage.

Make sure that no water gets into this article.

For more information, you can visit our website [www.nenko.com](http://www.nenko.com)



