



1. Product Name

Talking Photo Album - Deluxe

2. Product Code

20367471

3. Color

As shown



4. Short Description

Talking Photo Albums can be used in many different ways. They make a perfect gift for family and friends; they can be used as a learning resource in a school classroom and also to create talking memory books for people living with Dementia. You can record and playback a voice message for each of the 30 pages or download your own sound files from a computer.

Features:

- 30 pages with recording function (max. 10 seconds per page).
- Easy-to-use buttons for recording and playback.
- Dimensions of photo pockets: 15 x 10 cm.
- Battery-powered: 3 x AAA (not included).
- Automatic saving of recordings, even during battery replacement.

5. Sensory Stimulation

Hearing and Seeing

6. Commissioning

Applying the Page Number Stickers

Apply the page number stickers on each page. You can stick the stickers on your photos before inserting them or on the outside of the page sleeve.

Record and play a message

You can record a voice message for each page (up to 30 pages). The total recording time is 2 hours, and the length of each message may vary.

1. Turn the power switch to the "**ON**" position. The green indicator will light up to confirm.
2. Use the "**Previous**" and "**Next**" buttons to select the page number where you want to record.
3. Press the "**Record**" button once. The red indicator will blink to show that the recording is ready to begin.





4. Press the "**Play/Pause**" button to start the recording. The red indicator will stay on to show that the recording is in progress. Speak clearly from about 15 cm away from the microphone.
5. Want to pause the recording? Press the "**Play/Pause**" button again. The red indicator will blink to indicate the recording is paused. Press "**Play**" again to resume. You can repeat this as often as needed.
6. To finish the recording, press "**Play**" to pause and then press the "**Record**" button to save the message.
7. Press the "**Play/Pause**" button to play back the message. You can pause and resume at any time by pressing the same button again.

Important: You can re-record each message as often as desired. A new message will overwrite the old one. Did you accidentally press the record button? Press it again to cancel the recording.

Protect messages from deletion

You can protect the recordings from accidental deletion. Slide the LOCK switch to the left to disable recording. Playback remains possible, but recording will be disabled.


Headphone Jack

You can connect headphones for personal listening. You can also connect the photo book player to an external speaker via the headphone jack.

Volume control

Turn the volume knob to increase or decrease the playback volume.



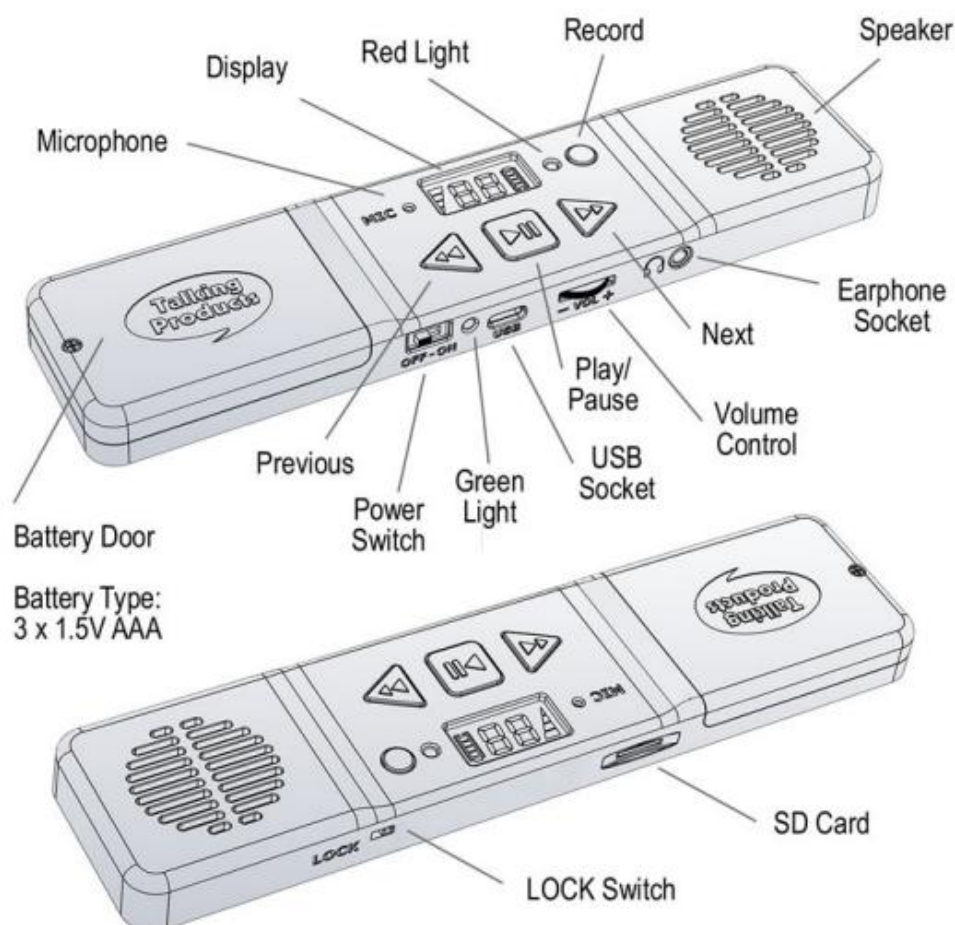

Transferring audio to and from a computer

Your voice recordings are stored in the internal memory. You can save these recordings and transfer them to a computer via the USB port.

1. Make sure the power switch is set to **OFF**.
2. Connect the photo album to an available USB port on your computer using the included USB cable. The first time you connect the photo album, drivers may be installed, and a restart of the computer might be required.
3. Your computer will recognize the device as a **USB storage** device called **USB ALBUM**.
4. The recordings are stored as MP3 files (128 kbps, Mono). Each page has a separate folder.
 - The recording for **Page 1** will be saved as REC0001.MP3 in the **PAGE01** folder.
 - If you want to play a file on **Page 2**, place it in the **PAGE02** folder, and so on.



5. You can drag folders or MP3 files to your computer and save them to the hard drive.
6. Want to add pre-recorded sounds to your album? Drag your audio files into the corresponding folder on the device.
 - If you want a file to play on **Page 1**, place it in the **PAGE01** folder.
 - If you want a file to play on **Page 2**, place it in the **PAGE02** folder, and so on.
7. **Important:** Before transferring an MP3 file, you must rename it to **REC0001.MP3**. If the filename is incorrect, the album will not play the file.

Notes:

- The album only supports **MP3 files**. **WAV**, **MOV**, or **MP4** files are not supported.
- The maximum recording time is **120 minutes** or **128 MB**, spread over 30 pages.
- The SD card typically does not need to be removed or replaced. The album will not work without an SD card.
- After **15 minutes of inactivity**, the album automatically enters sleep mode to save battery. Turn the device OFF and then ON again to activate it.

Volume and Sound Quality:

The playback volume can be adjusted by varying the distance to the microphone.

7. Safety

1. Not suitable for children under **3 years** old.
2. Do not submerge the device in water.
3. Do not attempt to disassemble the device.
4. Do not short-circuit the electrical connections.
5. Insert the batteries correctly.
6. Do not use old and new batteries together.
7. Remove empty batteries from the battery compartment.
8. Do not recharge the batteries, expose them to heat, or throw them into the fire.

For more information, please visit our website www.nenko.com



