

1. Name of the product

Portable CD Player with USB

2. Product code

21850101

3. Colour

See image



4. Included

- Portable CD player
- USB
- Manual

5. Brief description

Listen to your favourite radio station, brand-new CD's, and music on your smartphone through Bluetooth® or connect a compatible device with the external audio source function.

After connecting your CD player with the plug socket or providing some batteries, you can start enjoying your favourite music. Are you going to listen to music via the radio (FM), CD player or do you prefer the latest techniques? The possibilities are endless! This portable CD player can even be connected to headphones with an AUX cable!

This Boombox is light weighted and delivers a clear sound.

6. How to use

1. With this radio, it is possible to listen to the radio, play CD's or listen to music through headphones. This is possible with an AUX cable.
2. Place a CD in the CD compartment. Do this by opening the cover and placing the CD.
3. The volume can be changed by pressing the minus or plus button.
4. It is possible to connect an AUX cable to the AUX access port.
5. Place the batteries into the battery compartment.

Connecting Bluetooth

1. The distance between the devices should be less than 1 metre.
2. Press the source button to select Bluetooth. The Bluetooth function starts looking for a connection.
3. Turn on Bluetooth on your smartphone.
4. Select the radio from the Bluetooth device list to start connection process.
5. After a successful connection, the device is in play mode.

7. Specifications

Size: 23,1 x 13 x 26,1 cm
 Batteries: 4 x 1.5V/LR14
 Power: 230V





8. Safety

- Read the instructions carefully before use. Keep the user manual for future reference.
- The manufacturer shall not be liable for consequential damage or damage to property or persons caused by failure to observe the safety instructions or by improper use of the appliance.
- Do not use the device if any part of it is damaged or defect. Replace a damaged or defect device immediately
- The device is suitable for indoor use only. Do not use the appliance outdoors.
- The appliance is suitable for domestic use only. Do not use the appliance for commercial purposes.
- Do not use the appliance near bathtubs, showers, washbasins, or other facilities containing water.
- Do not use a timer or separate remote-control system to switch the appliance off automatically.
- Do not cover the device
- Place the device on a stable, flat surface
- Keep the device away from fireable objects.

9. Electrical safety

- To reduce the risk of electric shock, this product should only be opened for service by a qualified technician.
- Disconnect the product from the mains and other equipment if problems occur.
- Do not use the product if the power cord or plug is damaged or defective. If the power-supply cord or plug is damaged or defective, the component must be replaced by the manufacturer or an authorised service centre.
- Before using the appliance, always check that the mains voltage corresponds to that stated on the type of plate of the appliance.
- Do not move the appliance by pulling the power cable. Make sure that the mains cable cannot become entangled.
- Do not immerse the appliance, the power cable or the power plug in water or other liquids.
- Do not leave the device unattended when the mains plug is connected to the mains power supply.
- Do not use an extension lead.





10. Maintenance

- Before cleaning and maintenance, always switch off the appliance, remove the mains plug from the socket and wait until the appliance has cooled down.
- Do not use cleaning agents or scrubs.
- Do not clean the inside of the unit.
- Do not attempt to repair the unit. If the appliance does not work properly, please report this to Customer Services.
- Do not immerse the unit in water or other liquids.
- Clean the outside of the unit with a soft, damp cloth. Dry the unit thoroughly with a clean, dry cloth.
- Clean the ventilation openings with a soft brush.