



1. Name of the product

Colour changing droplet

2. Product code

75542111

3. Colour

As pictured



4. Short description

Calm your mind with the help of this colour changing sensory glowing furniture.

The color-changing furniture is a great child-friendly night light that can be ideal for the children's room. It has calming properties that are perfect for sensory rooms. This colour-changing piece of furniture is durable and versatile, making it a perfect product. The lamps can be changed up to 6 different colours, brightness and flashing modes of the lamps can also be adjusted with a remote control.

5. Content

- Adapter
- Remote control (requires 2 x AAA batteries not included)
- Drop Moodlight

6. Sensory stimulation

Sight

7. Security

WARNING! Contains sequences of flashing lights that can affect individuals prone to photosensitive epilepsy or other light sensitivity.

- Make sure that the product is not damaged before setting up the product. If any part of the product is damaged, do not try to assemble and use it;
- Use only the adapter supplied with this product and no other adapter should be used;
- This is not a toy. Children should always be accompanied when using this product;
- Always disconnect the product before cleaning;
- Do not work in the packaging;
- Keep away from heat sources;
- Carry out regular checks to ensure that fasteners, fittings have not become loose.

Before installation

- Before you begin, read these instructions carefully and save them for future use. Check the contents in the package and make sure that you have listed all the required parts and that no parts are missing. If parts are missing, do **NOT** try to assemble the product;
- Carefully remove the product from the package;
- Make sure that a plug connection is at the reachable distance, without stretching the wire too much;





- This unit is rechargeable; Therefore, it is advised to reduce the unit between 4-6 hours before use to charge;
- Once fully charged, the device should work for 8-10 hours, before charging is needed. Note, however, that the longer the device is on, the brightness of the light may become weaker, if this is the case, please connect the adapter to charge.

8. Installation

1. At the base of the product, the port for the adapter pen to be inserted is covered with a rubber cover. Pull the cover open. Insert the adapter pin into this port.
2. Plug the adapter into the power outlet and turn it on. The device does not need to be continuously powered via the mains. After it is charged, the adapter can be removed.
3. To turn on the device on the small white button next to the adapter DC port. Then the "On" button on the remote.

Remote control functions

	Increase and decrease Brightness		Changes by different colors in flash mode
	Power buttons		Changes colors in 3 Seconds jump
	Change by different colors in static mode		Color fades
	Select the main primary colors in static mode		Color fades slowly

- To insert batteries into the remote control, open the lid on the back of the remote and add 2 x AAA Batteries - make sure you follow the diagram in the battery box. Replace the cover and turn it on.

Battery alerts! Batteries should only be inserted or changed by an adult.

For more information, you can visit our website www.nenko.com

