



1. Name of the product

Sensory light table with wooden distribution set

2. Product code

97979036

3. Color

As pictured



4. Short description

Discover the perfect combination set for sensory exploration. Suitable for children, but also for children and adults with disabilities.

The Sensory Mood Discovery Table is designed with a raised edge on the outer edge, creating an inviting space for playful learning and sensory exploration. The sturdy yet lightweight design is both beautiful and practical, making it easy to move and quick to clean.

Whether it's individual focus work or playing together, this table offers endless possibilities. With the included remote control, the soft colored or white lighting can be adjusted, allowing the discovery area to be used for sorting and organizing objects, exploring different materials and substances (liquids, sand, jelly, foam) and creating an imaginative play world.

5. Content

- Light table
- Distribution set
- Remote control


6. Sensory stimulations

Sight


7. Commissioning

- Select the appropriate charging adapter (UK/EU/US/AU).
- Open the rubber cover of the charging socket on the bottom and plug in the charger.
- Always charge with the light in the OFF position.
- If the light turns on while charging, use the ON/OFF button on the bottom to turn it OFF.
- Charge it for 8-10 hours, take out the charger and put the rubber cover back in before using it.
- Do not use it continuously with the charger plugged into the wall outlet.



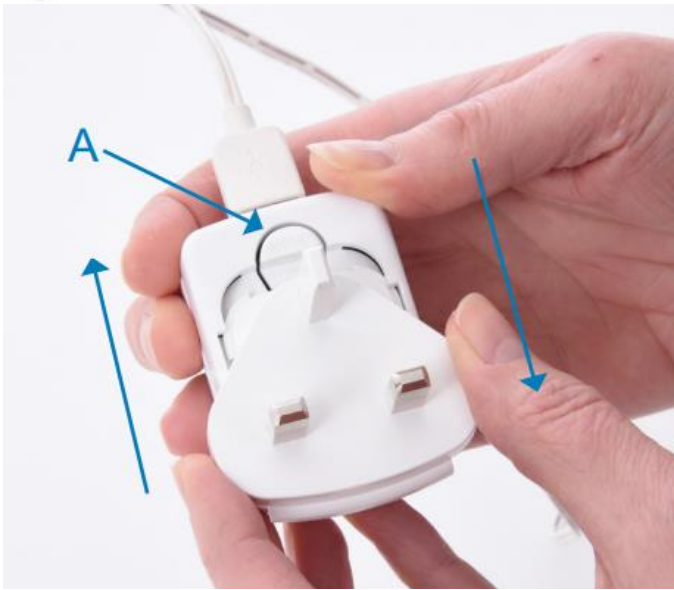

8. Remote control instructions

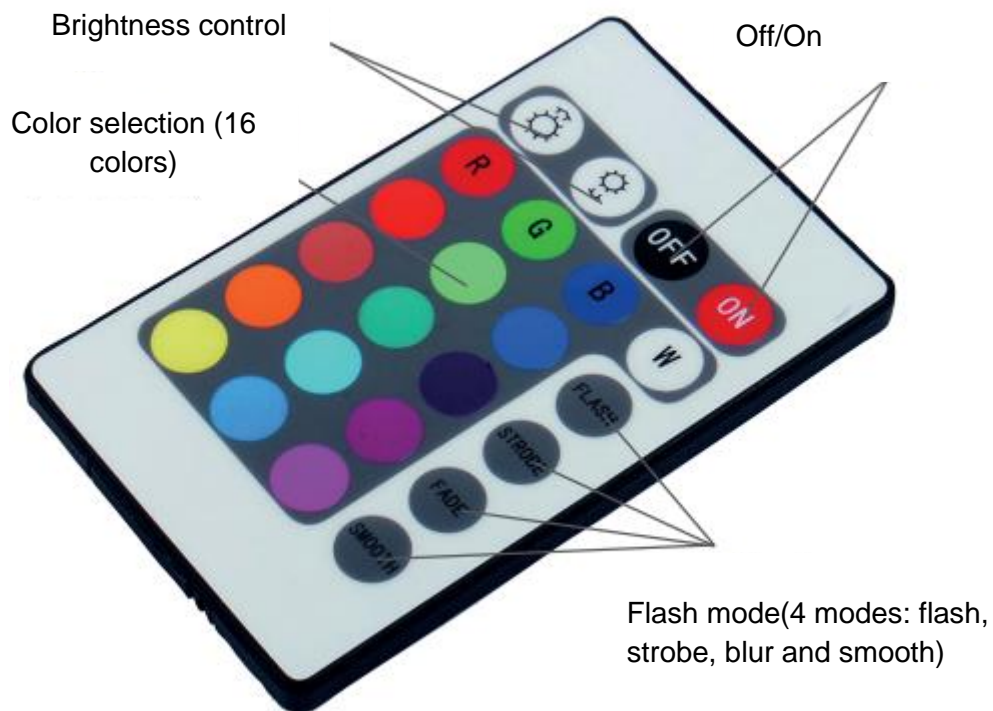



9. Technical information

- (IP65 rated) Light unit suitable for indoor or outdoor use.
- Operating time: 5-10 hours (depending on program mode).
- Charger input - AC 110V-240V 50/60HZ - Output DC5V.
- Battery replacement for the remote control: CR2025 Lithium button cell.

10. Warnings

- Suitable for use under adult supervision in children. This is not a toy.
- The power adapter and remote control are not waterproof, keep them away from water.
- In the mode of fast flashing or strobe light, the light source can potentially cause seizures in children with a history of photosensitive epilepsy.
- The remote control includes a coin cell battery - Keep new and used batteries out of reach of children. Dispose of used batteries immediately. A coin cell battery can cause serious injury if swallowed or placed in a body part. If you suspect that batteries have been swallowed or placed in a body part, seek medical attention immediately.
- Please keep this information for future reference.

11. Problem solving

- If the light flashes uncontrollably, it means that the battery is low. Let the light flash until it turns off, then fully charge it for 8-10 hours.
- Extend battery life by charging when power is low, rather than turning off the light completely. The useful life will decrease when using the Flash/Strobe/Fade/Smooth program.
- If the remote control does not respond, but the light can be turned on/off manually at the base, make sure that the transparent tab has been removed from the battery case of the remote control. Also check the condition of the coin cell battery, where the "+" side should face upwards.

For more information, visit our website www.nenko.com

