



## 1. Product name

Pod Ball Chair Sensory Retro Egg Shape with lights and speakers

## 2. Product code

99200065

## 3. Colour

As shown



## 4. Description

The Blue Retro Egg Chair is a striking designer chair that combines comfort and a sense of security in one stylish piece. Thanks to its round, enclosed shape, this chair offers a feeling of safety and privacy.

## 5. Specifications

Size: Height: 136 cm

Width: 72 cm

Depth: 96 cm

Weight: 40 kg (approx.)

Input: 100–240V 50/60Hz 1.5A

Output: 12V 4A

Cushion cover: 100% polyester

Filling: 100% polyurethane foam

360° rotatable

## 6. Safety

- Before assembly, check that the product is not damaged. If any part is damaged, do not attempt to assemble or use it.
- This product contains non-replaceable LEDs. If one of the LEDs stops working, the entire unit must be disposed of according to local regulations.
- Remove all packaging materials before installation. Do not use while still in packaging.
- Keep away from heat sources or open flames.
- Ensure the cable is positioned in such a way that there is no risk of tripping, entanglement, or strangulation.
- Make sure the chair is placed on a stable, level, and flat surface.
- This chair is intended for sitting only. Do not use it for any other purpose.





## **7. Use**

1. Carefully unpack all parts from the box and place them separately on a soft cloth or cardboard to prevent damage to the chair and floor surfaces.
2. Check that all listed parts are present before starting assembly. If parts are missing or damaged, do not proceed and contact your supplier for replacements.
3. Ensure a power outlet is within reach without overstretching the cable.
4. Follow the assembly diagram to assemble the egg chair.

### **Bluetooth connection**

1. Turn on the speaker in the chair and switch to Bluetooth mode.
2. Enable Bluetooth on your device (phone or audio device). Refer to the manufacturer's instructions if needed.
3. Search for Bluetooth devices and select "F-9181057".
4. A "Connected" sound will confirm successful pairing.

### **Cleaning**

- Do not use abrasive or aggressive cleaning agents.
- Clean only with a sponge.
- If fingerprints or stains need to be removed, clean with a soft cloth soaked in a mild detergent and warm water. Rinse thoroughly and dry with a soft, clean cloth.

Keep the packaging and user manual, as they contain important information.




## Control panel



1	Power on / press and hold to turn off	2	Change mode
3	Previous track / press and hold to increase volume	4	Play/Pause
5	Next track / press and hold to decrease volume	6	Charge your device
7	AUX-mode	8	USB-mode



## Remote control

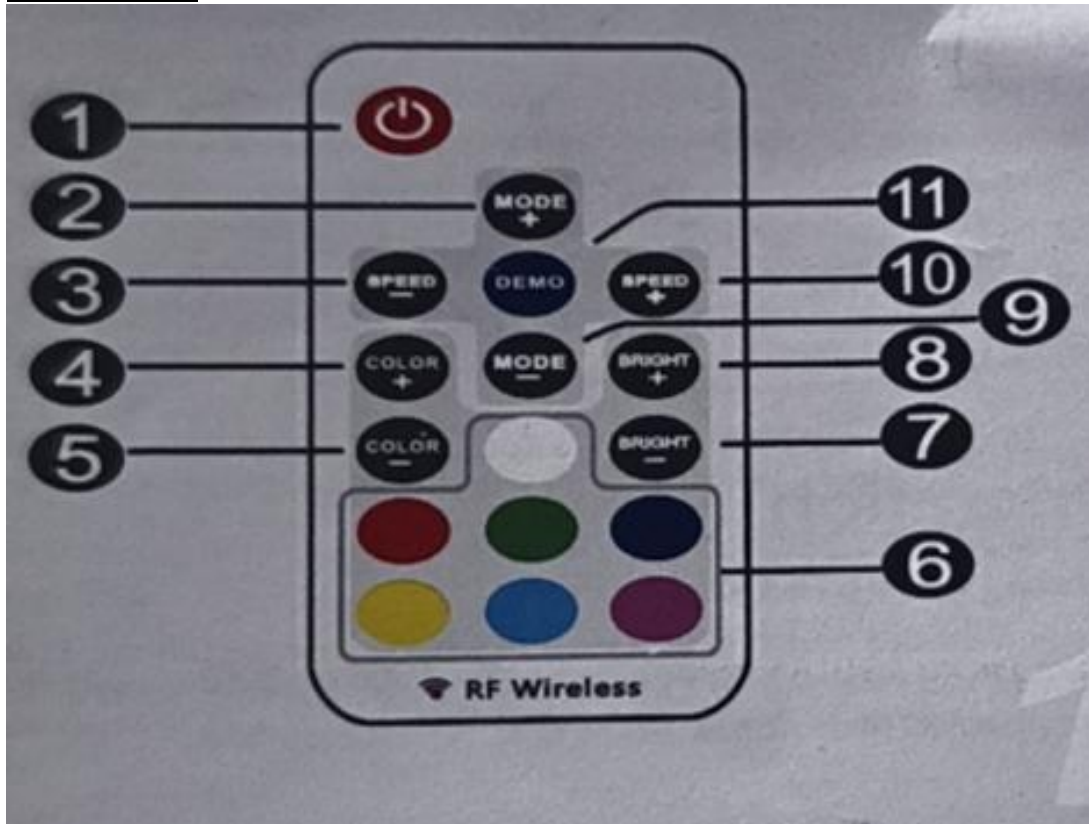

1	ON/OFF	6	Switch between different colors in static mode
2/9	Next/Previous mode	7/8	Brightness +/-
3/10	+ Increase/decrease sequence speed	11	3-colour flashing
4/5	Next/Previous colour		

## 8. Additional Information

To replace the battery of the remote control, refer to the instructions on the back of the remote. The remote requires a CR2025 lithium battery to operate. Remove the tab before use.

**WARNING!** This product contains a button cell battery. The battery can cause serious or fatal injury within 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or inserted.

**Disposal:** The “Crossed Wheelie Bin” symbol on the product indicates that it is classified as electrical or electronic equipment and must not be disposed of with household or commercial waste at the end of its life. Dispose of according to local regulations.

For more information, you can visit our website [www.nenko.com](http://www.nenko.com)

