



## 1. Product Name

Kidykaraoke - karaoke speaker and microphones

## 2. Product Code

99501471

## 3. Brief Description

Turn any party into an unforgettable experience with KIDYKARAOKE, the portable karaoke speaker that combines powerful sound with colorful light effects. Equipped with two wireless microphones and fun features, this speaker turns any location into a stage. Whether at home or on the go, the 40W speaker and dynamic light show guarantee endless fun!



## 4. Sensory Stimulation

Hearing and Seeing

## 5. Specifications

Battery:	Internal battery 3,7V 1800mAh 6,66Wh
Voltage:	DC 5V
Speaker:	40 W
Accessories:	USB-C cable, 2 microphones with battery 3.7V 500mAh 1.85Wh
Material:	ABS
Weight:	1043g
Dimensions:	220 x 220 x 87 mm

## 6. Contents

1x station  
2x Microphones  
1 x USB-C/USB Cable  
1x User Manual  
1x Colourful Box Packaging

 
 
## 7. Power Supply

- Always use the supplied cable to power the KIDYKARAOKE (AC/DC adapter not included).
- The transformer, power supply, or charger used with the electric toy must be regularly checked for damage to the power cord, plug, casing, or other components. If any damage is found, the transformer must not be used until the necessary repairs have been carried out.
- Improper use of the transformer may result in electric shock.
- The toy may only be used with a transformer or power supply designed for toys. The transformer or power unit is not a toy.
- WARNING! Only use the detachable power supply unit provided with this toy to charge the battery.
- This toy contains a non-replaceable battery.
- The manual must be kept as it contains important information.






- This toy may only be connected to devices that bear one of the following symbols:

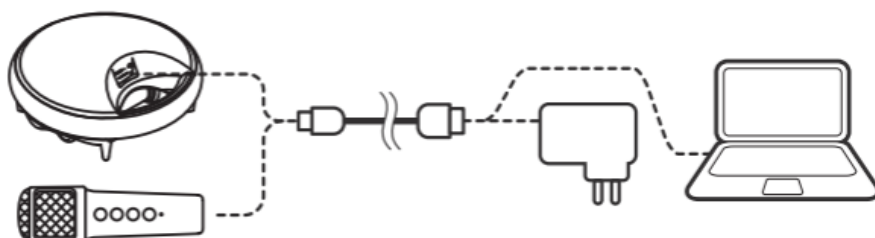

## 8. The Device

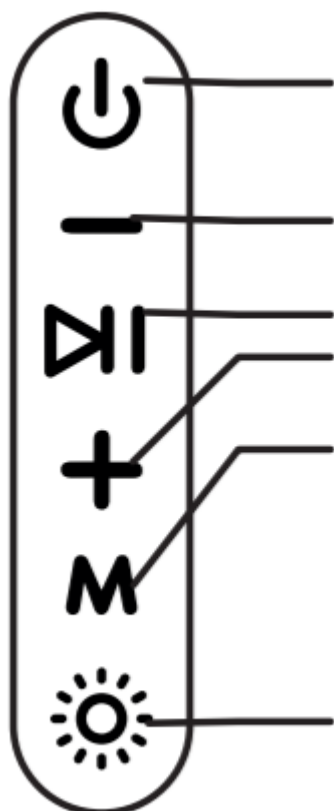

On/Off switch: Turn on. Press the switch for 3 seconds to turn off the device. If the device is not used for 30 minutes, it will automatically switch off.

Previous track: Go to the previous track / short press to decrease the volume.

Play: Music on / Pause



Next track: Switch to the next song / short press to increase the volume.

Music button: Press to activate Bluetooth mode, and a corresponding sound will be heard (activate Bluetooth on your mobile phone and search for the Bluetooth name "KIDYKARAOKE" to establish the connection. A corresponding sound will be heard once the connection is established, and from that moment, the product can play songs from the mobile phone).

Light: Press to adjust the LEDs (Soft-Equalizer-Off).



## 9. The Microphones

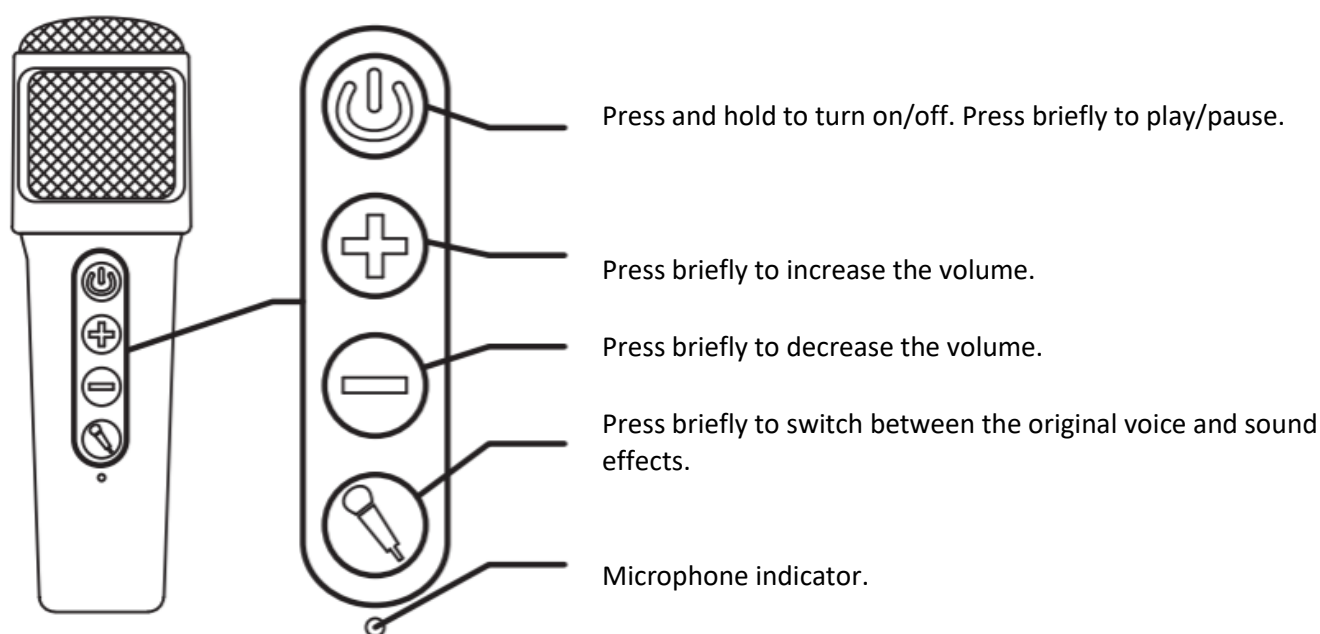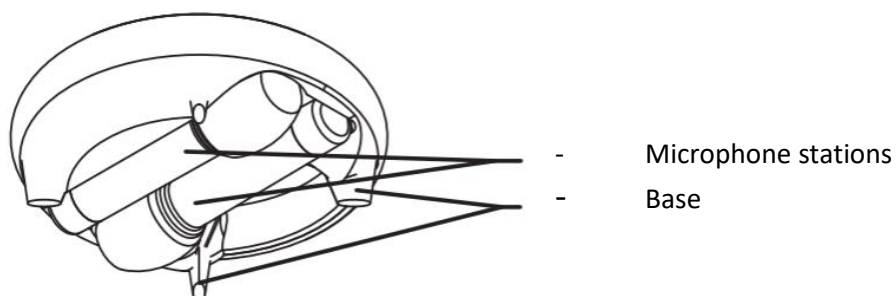

**Warning!** Do not forget to turn off the microphones before placing them in the dock to avoid the Larson effect.

Keep these instructions as they contain important information.

For more information, please visit our website [www.nenko.com](http://www.nenko.com)

