



1. Name of the product

Nenko Interactive – Interactive Cube


2. Product code

18871135

3. Colours

The colours of the six planes are:

- Blue
- Red
- Green
- Pink
- Orange
- Yellow

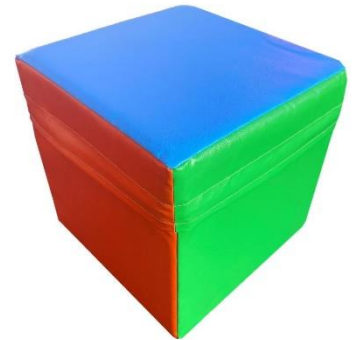

4. Short description

A super fun and essential product within the Nenko Interactive program. This wireless, soft cube has six brightly coloured surfaces (Blue, Green, Red, Orange, Yellow and Pink) and by rolling the cube the colour of the nenko interactive products present changes in the colour on top. No PC or programs needed. To be combined with Nenko Interactive products such as light source, bubble units, LED spots and strips, light bulb and depth mirror. Equipped with built-in rechargeable battery and corresponding USB charger. Built-in battery with USB charger

5. Senses stimulations

See & Feel

6. Specifications

Size: 30 x 30 x 30 cm

flow: 220V – 5V

7. Content

- 1 x Wireless Interactive Cube Module
- 1 x Softplay Cube
- 1 x Power adapter with UK, American, European and Australian plugs
- 1 x Mini USB charging cable





8. Quick Using manual

Charging

Step 1: Carefully remove the wireless cube module, charging cable and power adapter from the packaging.

Step 2: Unpack the power adapter from its cardboard box and plastic bag. Fit the appropriate country plug pins by clipping the desired pins onto the adapter.

Do this by first sliding one side of the pin adapter into the adapter and then pushing home until it clicks into place.



Step 3: Connect the charging cable to the adapter and the wireless cube module.



Step 4: Plug the power adapter into the socket and turn on the power. Note that the charging light will light up while the device is charging. When the battery is full, the light goes off. You may have a red or green light. Both indicate that charging occurs when lit.

Step 5: **Make sure the on/off switch is ON whilst charging.** This on/off switch is primarily intended for shipping and for long-term storage. In normal use, this switch may remain switched on. The cube module automatically turns off 20 seconds after being used and wakes up when it detects movement.





ON (slide to the left)

Operation



Orient the cube module in such a way that the coloured dots on the module match the sides of the cube.

Fully insert the cube module completely into the cube.

(Make sure the cube module is ON and charged)

Zip up the soft play cube.

Throw or turn the cube to see the colours of your compatible equipment change.

9. Safety information

- For use indoors only, in a dry environment.
- Never try to open the wireless switch. It contains sensitive electronics.
- Use only the power adapter supplied with the device.

10. Electrical information

Power adapter:

- Mains input voltage (power adapter) 100-240Vac 50/60HZ
- Input current 0.5A
- Adapter output 5V 2A (10Watt)
- Approvals: CE, UL, CUL

Wireless Switch

- Input voltage 5V
- Battery powered (Rechargeable)

Approval: CE – ROHS



For more information, you can visit our website www.nenko.com

