

## Manual: Replacing the tube of the bubble tube


1) Unscrew the screws from the bottom.




2) Detach the white cover.



3) Unscrew the screws from the tube.

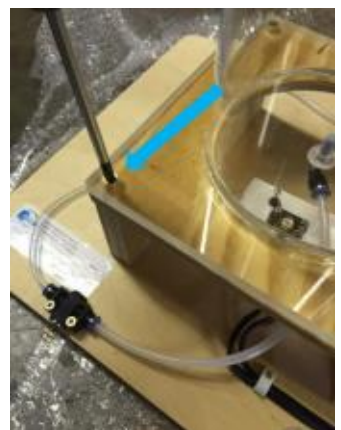

4) Lift the tube slightly.

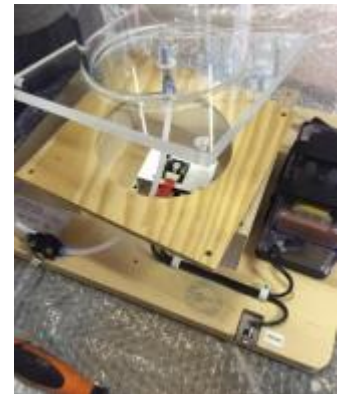

5) Press the (blue) part to release the hoses.



6) It is now possible to detach the tube from the bottom.

As soon as you want to use the bubble tube again, it is possible to attach a (new) tube to it. Place the tube on the base and reconnect the hoses, then all screws can be screwed back in place. It is now possible to use the bubble unit again.

*For more information you can visit our website: [www.nenko.com](http://www.nenko.com)*

